

Windows XP Home/Pro/x64 Installation Instructions

1. From the Windows Start menu, select “Control Panel”.
2. Select “Printers and Other Hardware” and then click [Add Printer].
3. When the “Add Printer Wizard” appears, click [Next].
4. Remove the check mark from “Automatically Detect and Install my Plug and Play Printer” box and then click [Next].
5. Select the port the printer is connected to and then click [Next].
6. From the left pane, select Canon from the list of manufacturers and then select your product from the list of printers on the right.

Note: If your product is not listed on the right it may not be supported by the operating system (in-box) driver. In this case, please visit the Canon support page for your product.
7. Click [Next] and then click [Next] again when the “Name your Printer” screen appears.
8. Click [Next] if you wish to print a test page.
9. If the printer is connected and turned on, click [Finish]. (You may be prompted to insert your Windows installation CD-ROM at this point. If so, insert the CD-ROM and click OK.)

Windows 2000 Installation Instructions

1. From the Windows Start menu, choose “Settings” and then click “Printers”
2. Choose Settings, and then click Printers.
3. Double-click the “Add Printer” icon and then click [Next].
4. Click Local or Network printer and then click [Next].
5. Select the port the printer is connected to and then click [Next].
6. From the left pane, select Canon from the list of manufacturers and then select your product from the list of printers on the right.

Note: If your product is not listed on the right it may not be supported by the operating system (in-box) driver. In this case, please visit the Canon support page for your product.
7. Click [Next].
8. Choose whether or not you want the printer to be the default printer and then click [Next].
9. Choose whether or not the printer will be shared and then click [Next].
10. If the printer is connected and turned on, click Finish. (You may be prompted to insert your Windows installation CD-ROM at this point. Insert the CD-ROM and click OK.)

Windows Millennium/98/95 Installation Instructions

1. From the Windows Start menu, choose “Settings” and then click “Printers”
2. Double-click the “Add Printer” icon and then click [Next].
3. A screen may appear asking you “How is the printer attached to your computer?” Click local, then click [Next].
4. From the left pane, select Canon from the list of manufacturers and then select your product from the list of printers on the right.
Note: If your product is not listed on the right it may not be supported by the operating system (in-box) driver. In this case, please visit the Canon support page for your product for support details.
5. Click [Next].
6. Select the port the printer is connected to and then click [Next].
7. Choose whether or not you want the printer to be the default printer and then click [Next].
8. If the printer is connected and turned on, click Finish. (You may be prompted to insert your Windows installation CD-ROM at this point. Insert the CD-ROM and click OK.)

Windows NT 4.0 Installation Instructions

1. From the Windows Start menu, choose “Settings” and then click “Printers”
2. Double-click the Add Printer icon.
3. Select how the printer will be managed by clicking either “My Computer” or “Network print server”, and then click [Next].
4. Select the port the printer is connected to and then click [Next].
5. From the left pane, select Canon from the list of manufacturers and then select your product from the list of printers on the right.
Note: If your product is not listed on the right it may not be supported by the operating system (in-box) driver. In this case, please visit the Canon support page for your product for support details.
6. Click [Next].
7. Choose whether or not you want the printer to be the default printer and click [Next].
8. Choose whether or not the printer will be shared. Click [Next].
9. If the printer is connected and turned on, click Finish. (You may be prompted to insert your Windows installation CD-ROM at this point. Insert the CD-ROM and click OK.)